
एसिटिलीन काला — विशिष्टि

(पहला पुनरीक्षण)

Acetylene Black — Specification

(First Revision)

ICS 71.060

© BIS 2022



भारतीय मानक ब्यूरो
BUREAU OF INDIAN STANDARDS
मानक भवन, 9 बहादुर शाह ज़फर मार्ग, नई दिल्ली - 110002
MANAK BHAVAN, 9 BAHADUR SHAH ZAFAR MARG
NEW DELHI - 110002

www.bis.gov.in www.standardsbis.in

FOREWORD

This Indian Standard (First Revision) was adopted by the Bureau of Indian Standards, after the draft finalized by the Inorganic Chemicals Sectional Committee had been approved by the Chemical Division Council.

Acetylene black is a form of carbon with high electrical conductivity; made by decomposition by heat. In present day dry cells, the cathode is manganese dioxide with about 10 - 30 percent of acetylene black to improve the matrix conductivity. The high carbon content in acetylene black (about 92 percent) makes it attractive for conversion to carbon.

This Standard was first published in 1987. In this revision, Reference clause, Packing and Marking clauses have been updated and editorial corrections have been made, wherever necessary.

In the preparation of this standard, considerable assistance has been derived from JIS K1469 - 1966 Acetylene Black. Two grades have been specified in this standard as per the requirements given in Table 1. These are known as 50 percent and 75 percent compressed material, respectively, in trade.

The composition of the Committee responsible for formulation of this standard is given at Annex C.

For the purpose of deciding whether a particular requirement of this standard is complied with, the final value, observed or calculated expressing the result of a test or analysis, shall be rounded off in accordance with IS 2 : 2022 'Rules for rounding off numerical values (*second revision*)'. The number of significant places retained in the rounded off value should be the same as that of the specified value in this standard.

*Indian Standard***ACETYLENE BLACK — SPECIFICATION***(First Revision)***1 SCOPE**

1.1 This standard prescribes the requirements and methods of sampling and test for acetylene black for use in the manufacture of dry cells.

2 REFERENCES

The standards listed below contain provisions which through reference in this text constitute provisions of this standard. At the time of publication, the editions indicated were valid. All standards are subject to revision, and parties to agreement based on this Indian Standard are encouraged to investigate the possibility of applying the most recent editions of the Indian Standards indicated below:

<i>IS No.</i>	<i>Title</i>
460 (Part 1) : 2020	Test Sieves — Specification: Part 1 Wire cloth test sieves (<i>fourth revision</i>)

1070 :	Reagent grade water —
1992	Specification (<i>third revision</i>)
4905 :	Random sampling and
2015	randomization procedures (<i>first revision</i>)

3 GRADES

3.1 Acetylene black shall be of two grades:

- Grade 1, and
- Grade 2

4 REQUIREMENTS

4.1 Acetylene black shall be free from impurities which might have a deteriorating influence on the efficiency of the dry cells.

4.2 The material when tested according to the methods prescribed in Annex A shall comply with the requirements given in Table 1. Reference to the relevant clauses of Annex A is given in col 5 of Table 1.

Table 1 Requirements for Acetylene Black

Sl. No.	Characteristics	Requirements		Method of test, Ref. to Cl.No.in Annex A
		Grade 1	Grade 2	
(1)	(2)	(3)	(4)	(5)
i)	Moisture, percent by mass, <i>Max</i>	0.4	0.4	A-2
ii)	Ash, percent by mass, <i>Max</i>	0.2	0.2	A-3
iii)	Coarse particles percent by mass, <i>Max</i>	0.04	0.04	A-4

Sl. No.	Characteristics	Requirements		Method of test, Ref. to Cl.No.in Annex A
		Grade 1 (3)	Grade 2 (4)	
iv)	Hydrochloric acid absorption number(ml/5g), <i>Min</i>	22.0	20.0	A-5
	Or Acetone absorption number (ml/5g), <i>Min (see Note 1)</i>	27.0	23.0	A-6
v)	Electrical resistivity (ohm-cm), <i>Max</i>	0.25	0.25	A-7
vi)	Pour density (g/ml)	0.05 to 0.09	0.09 to 0.11	A-8
	or Apparent density(g/ml) (see Note 2)	0.08 to 0.10		A-9
vii)	pH value	6-8	6-8	A-10

NOTES

1 Hydrochloric acid absorption number or acetone absorption number - one of these whichever is agreed upon between the purchaser and the supplier, only need to be taken as criterion for requirement in passing for standard marking.

2 Either of these to be tested as agreed upon between the purchaser and the supplier and to be taken as criterion for the requirement in passing for standard marking.

5 PACKING AND MARKING

5.1 Packaging

The material shall be packed in closed containers as agreed to between the purchaser and the supplier.

5.2 Marking

The packages shall be securely closed and bear legibly and indelibly the following information:

- Name and grade of the material;
- Name of the manufacturer and his recognized trade mark, if any;
- Gross and net mass;
- Date of manufacture and;
- Batch number

5.2.1 BIS Certification Marking

The product may also be marked with the Standard Mark.

5.2.1.1 The product(s) conforming to the requirements of this standard may be certified as per the conformity assessment schemes under the provisions of the *Bureau of Indian Standards Act, 2016* and the Rules and Regulations framed there under, and the products may be marked with the Standard Mark.

6 SAMPLING

6.1 The method of drawing representative samples of the material, number of tests to be performed and the criteria for finding the conformity of the material to the specification is prescribed in Annex B.

Annex A

(Clause 4.2)

METHODS OF TEST FOR ACETYLENE BLACK

A-1 QUALITY OF REAGENTS

A-1.1 Unless specified otherwise, pure chemicals and distilled water (*see* IS 1070) shall be employed in tests.

NOTE — ‘Pure chemicals’ shall mean chemicals that do not contain impurities which affect the results of analysis.

A-2 MOISTURE

A-2.1 One gram of acetylene black is weighed accurately into a weighing bottles (87 mm in outside diameter). Spread it on the bottom of the bottle in uniform thickness and dry for 2 h in air oven maintained at 105 to 110 °C. This is transferred to a desiccator and cooled to room temperature. It is weighed accurately and the moisture content calculated.

A-2.2 Calculation

Moisture, percent by mass = $m/M \times 100$

where

m = loss in mass in g on drying,
and

M = mass in g of the material
taken for the test.

A-3 ASH

A-3.1 Two grams of acetylene black is weighed accurately into 50 ml silica crucible and heated gently in an electric furnace with the precaution against its scattering. Heating is continued at 750 ± 10 °C for more than two and a half h to attain constant mass and then allow to cool in a desiccator. It is weighed accurately and the ash is calculated.

A- 3.2 Calculation

Ash, percent by mass = $100 \times M_1/M$

where

M_1 = Mass in g of the residue
obtained, and

M = mass in g of the material
taken for the test.

A-4 COARSE PARTICLES

A-4.1 Apparatus

A-4.1.1 Test Sieve — 150 micron IS sieve [*see* IS 460 (Part 1)].

A-4.2 Procedure

50 g of the sample is weighed accurately into a container of constant volume. Place it on the 150 micron IS sieve. The sieve frame shall be 200 mm inside diameter and connecting part between the frame and the wire gauze shall be soldered from inside. A small amount of alcohol or surface-active agent is added as wetting agent.

A rubber spatula is used for levelling lightly while pouring water on it and allow it to pass through the sieve. Continue pouring of water until the washings are clear. Dry the sieve for 30 min in an air oven maintained at 105 to 110 °C and, allow to cool in a desiccator. Transfer the residue to a tared weighing bottle and, weigh accurately.

A-4.3 Calculation

Coarse particles, percent by mass = $\frac{100 \times m}{M}$

where

m = mass in g of the residue, and

M = mass in g of the material taken for the test.

A-5 HYDROCHLORIC ACID ABSORPTION NUMBER

A-5.1 Reagents

A-5.1.1 *Dilute Hydrochloric Acid* — 2 N approximately.

A-5.2 Procedure

Weigh accurately about 5 g of the sample into a 300 ml conical flask and add dropwise 40 ml of 2 N hydrochloric acid on the sample from a 50 ml burette graduated in 0.1 ml division. After the flask is stoppered with a rubber stopper, mix them thoroughly by shaking horizontally for about one min, taking care that the inside wall of the flask shall not be wetted with the hydrochloric acid. Then hold the stoppered flask by the neck and shake it using rotary motion uninterruptedly for a min till particles start agglomerating.

A-5.3 Stop the shaking when the sample is permeated uniformly with the hydrochloric acid, and scrub off gently the sample adhering to the wall of the flask with a glass rod. This process finishes in about three min.

A-5.4 Add dropwise 2 ml of 2 N hydrochloric acid and shake thoroughly for about two min as mentioned above, so that small particles hit the wall of the flask hard. Add 1 ml of the acid afresh and shake vigorously for about two min. Thereafter the amount of dropping acid is decreased gradually (0.5 – 0.3 – 0.2 – 0.1 ml). During the process, the flask may be tapped with palm so that the lumps of the sample adhering to the wall of the flask are removed down.

A-5.5 Continue this operation until the small particles build up to an agglomerate. This test shall be finished in 15 ± 1 min

from the beginning of the addition of hydrochloric acid.

A-5.6 Calculation

The total amount of 2 N hydrochloric acid required to get to the point of agglomeration shall be regarded as the hydrochloric acid absorption number.

NOTE - During this process, the flask should not be tapped with palm except when the sample particles are adhering to the wall are removed down.

A-6 ACETONE ABSORPTION NUMBER

A-6.1 General

Acetone absorption number is suggested as an alternative to hydrochloric acid absorption number. Handling acetone solution is relatively safer than 2 N hydrochloric acid solution. The flask size recommended is 500 ml. A larger size flask will provide a larger travel for material movement inside the flask for uniform wetting of carbon.

A-6.2 Reagent

A-6.2.1 *Test Solution* (1:9) — Mix 1 part of acetone with 9 parts of water by volume.

A-6.3 Procedure

A-6.3.1 Weigh 5 ± 0.01 g sample of black into a clean dry conical flask. Dispense 10 ml of test solution from burette into flask. Close flask with a rubber stopper. Then shake flask cautiously for one min using a rotary motion.

A-6.3.2 Open flask and add 5 ml of solution, re-stopper and repeat shaking, as described above, for 15 s.

NOTES

1 As the end point approaches added vigilance is necessary to avoid having the sample pass into a mud stage instead of forming the desired single ball.

2 If the black under test has unusually low absorption value, the indicated solution, addition should be reduced accordingly.

A-6.3.3 Repeat **A-6.2.2** until the black agglomerates into small balls. After small balls have formed, add 1 ml of solution in small increments and shake in between addition.

A-6.3.4 When the small balls join to form 2 or 3 larger balls, reduce solution drop by drop followed by vigorous shaking of the flask between each addition.

A-6.4 Calculation

When a single ball is formed that does not break down with continued shaking, record the burette reading. Repeat absorption value as the number of ml of test solution added to the 5 g sample. Duplicate determination should check within \pm ml.

A-7 Electrical Resistivity

A-7.1 Apparatus

A-7.1.1 The apparatus is shown in Fig. 1. Use up to 0.5 V voltmeter and 0.5 A ammeter with 200 graduation mark. It has an electronic box which provides an accurate dc current source, measures resistivity in milliohms and displays it on the digital window, and a screw press for compressing acetylene black to a prefixed packing density (0.70 g/cm^3), at which to measure samples resistivity.

A-7.2 Procedure

Weigh 0.70 g of acetylene black and pour it inside die body with bottom plunger in position. Then insert the top plunger and press it gradually down with hand. Place the entire assembly inside the screw press. Place the 'spacer' provided for attaining fixed packing density between the platen and the base of the screw press. Lower the platen till spacer is securely clamped underneath. Read resistivity in milliohms-

cm. The meter reading minus reading of lead resistance in milliohms (obtained by short-circuit without sample) is the resistivity of the acetylene black at 0.70 g/cm^3 packed density in milliohms-cm. The lead resistance is 2 to 3 milliohms as compared to the reading of sample of 70 to 72 milliohms. If the former is ignored, the meter reading is within 3 percent of accuracy. Dividing the reading by 1 000, will give resistivity in ohm-cm.

A-7.3 Calculation

$$\text{Electrical resistivity ohm-cm} = \frac{(S \times R)}{L}$$

where

S = cross-sectional area of the sample in cm ,

L = height of the pressed sample in cm (1 cm), and

R = electrical resistance in ohm of acetylene black sample.

A-8 POUR DENSITY

A-8.1 Procedure — Charge gently up to 100 ml with the sample with a spoon in a tared cylinder (100 ml) in inclined position and weigh to the 0.1 g so that the mass of the sample can be calculated accurately. Stopper the cylinder with a cork stopper and drop it freely fifty times on to a rubber sheet from a height of 5 cm. Calculate the pour density (g/ml) from the volume of the condensed sample.

A-8.2 Calculation

A-8.2.1

$$\text{Pour density (g/ml)} = \frac{M}{V}$$

where

M = mass in g of the-sample taken for the test, and

V = volume in ml of the sample
after having dropped fifty
times.

A-9 APPARENT DENSITY - ALTERNATE METHOD TO POUR DENSITY

A-9.1 General

Apparent density is defined as the mass per unit of external volume. It differs from real density in that part of the unit volume is occupied by voids and not by the material itself. Apparent density, therefore, has a value dependent on the ratio of pore space to substance, being limited in one direction by the real density of the substance itself and in the other by the density of the substance (usually air) occupying the voids. The unit used is grams per cubic centimetre.

A-9.2 Procedure

The method used is to take a container whose internal volume is accurately known and obtain the mass of material required to fill it full, without compressing or packing it. A light plywood body with inside dimensions of 30 cm \times 30 cm is most convenient. They are mass of the empty boxes taken and then it is filled to

overflowing. A straight edge is then drawn across the box levelling it off full. The full box is then weighed and the tare mass subtracted to give the mass of carbon for 2 700 cm³. Calculate mass per cm³ of carbon.

A-9.3 Calculation

If a container is used having a volume of other than 2 700 cm³, its volume must be determined in cm³ (length \times width \times height). The mass in grams required to fill it must be divided by the volume to give the mass per cm³.

A-10 pH VALUE

A-10.1 Weigh 5 g of the sample into a 500 ml beaker and add 150 ml water. Boil it for five min and allow to cool to room temperature. Centrifuge it for about 8 min (2 000 rpm) and decant off the supernatant liquid. Transfer the sludgy residue to a beaker and determine the pH value by means of a glass-electrode pH meter. Determine the pH value three times stirring the sludgy residue with a rod so that it adheres firmly to the electrodes. Repeat the measurement until the values of the three consecutive tests are coincident within the range of 0.1.

ANNEX B*(Clause 5.1)***SAMPLING OF ACETYLENE BLACK****B-1. GENERAL REQUIREMENTS OF SAMPLING**

B-1.1 In drawing samples, the following precautions and directions shall be observed.

B-1.2 Samples shall not be taken in an exposed place.

B-1.3 The sampling instrument shall be clean and dry.

B-1.4 Precautions shall be taken to protect the samples, the material being sampled, the sampling instrument and the containers for samples from adventitious contamination.

B-1.5 To draw a representative sample, the contents of each container shall be mixed thoroughly by suitable means.

B-1.6 The sample shall be placed in suitable, clean and dry glass containers on which the material has no action.

B-1.7 The sample containers shall be of such a size that they are almost completely filled with the sample.

B-1.8 Each sample container shall be sealed airtight after filling and marked with full details of sampling, date of sampling and year of manufacture of the material.

B-2 SCALE OF SAMPLING**B-2.1 Lot**

All the containers in a single consignment of the material drawn from the same batch of manufacture of same grade and the same size shall constitute a lot. If a consignment is declared or known to consist of different batches of manufacture or of different sizes of containers, the containers belonging to the same batch and

size shall be grouped together and each such group shall constitute a separate lot.

B-2.2 Samples shall be tested for each lot for ascertaining the conformity of the material to the requirements of this specification.

B-2.3 The number of containers (n) to be chosen from a lot shall depend upon the size of the lot (N) and shall be in accordance with Table 2.

Table 2 Number of Containers to be Selected for Sampling

(Clause B-2.3)

<i>Sl No.</i>	<i>Lot Size N</i>	<i>Sample Size n</i>
i)	Up to 50	3
ii)	51 to 100	4
iii)	101 to 150	5
iv)	151 to 300	7
v)	301 and above	10

B-2.4 These containers shall be chosen at random from the lot. In order to ensure the randomness of selection, reference may be made to IS 4905.


B-3 NUMBER OF TESTS

B-3.1 Test for the determination of all characteristics given in Table 1 shall be conducted on sample.

B-4 CRITERIA FOR CONFORMITY

B-4.1 For declaring the conformity of the lot to the requirements of all characteristics tested on the composite

sample, the test result for each characteristic shall satisfy the relevant requirements given in Table 1.

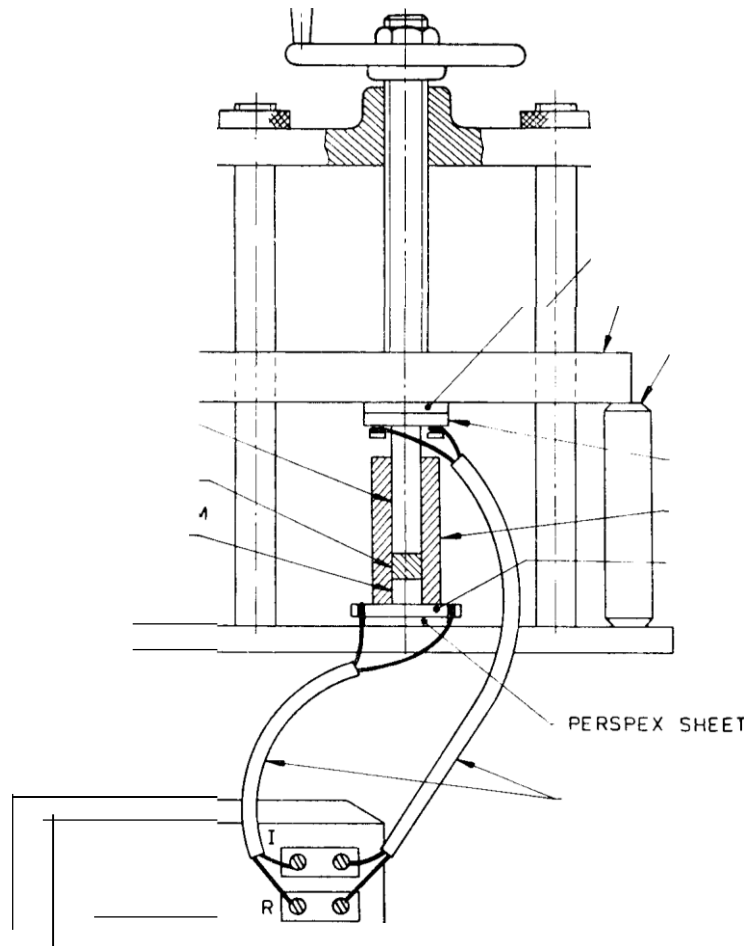

Note — Initial milliohm reading with shorting brass plungers top and bottom, this will be between 2 to 5 milliohm incase more then tighten connections.

FIG. 1 ELECTRICAL RESISTIVITY APPARATUS (ACETYLENE BLACK)

ANNEX C

(Foreword)

COMMITTEE COMPOSITION

Inorganic Chemicals Sectional Committee, CHD 1

<i>Organization</i>	<i>Representative(s)</i>
Central Salt and Marine Chemicals Research Institute, Bhavnagar	DR KANNAN SRINIVASAN, (Chairman)
Alkali Mfrs Association of India, Delhi	SHRI K. SRINIVASAN (SHRI H. S. DAS) (<i>Alternate</i>)
Bhabha Atomic Research Centre, Mumbai	DR A. V. R. REDDY (DR S. N. ACHARY) (<i>Alternate</i>)
Central Drugs Standard Control Organization	DR RAMAN MOHAN SINGH
Consumer Voice, Delhi	SHRI MAU KHAN SHRI K. C. CHAUDHARY (<i>Alternate</i>)
DGQA, New Delhi	DR GURBACHAN SINGH SHRI B. S. TOMAR (<i>Alternate</i>)
Delhi Jal Board	SHRI R. S. BAGHEL
Geological Survey of India, Kolkata	SHRI P. V. V. R. SARMA
Global Adsorbents Pvt Ltd, Kolkata	SHRI SANJAY DHANUKA
Grasim Industries Ltd, Nagda	SHRI ALOK SINGH SHRI PANKAJ GUPTA (<i>Alternate</i>)
Gujarat Alkalies and Chemicals Ltd, Vadodara	SHRI V. K. MAHIDA SHRI SHAILESH PATEL (<i>Alternate</i>)
Hindalco	SHRI NAGESWAR KAPURI SHRI Ajit Ramachandra (<i>Alternate</i>)
Hindustan Unilever Ltd, Mumbai	MS VRINDA RAJWADE SHRI SOJAN VARGHESE (<i>Alternate</i>)
Industrial Carbon Pvt Ltd, Ankleshwar	SHRI SATYAN ROHIT KUMAR

<i>Organization</i>	<i>Representative(s)</i>
Indian Chemical Council (ICC)	DR U. SHETKAR DR RAKESH KUMAR (<i>Alternate</i>)
Indian Institute of Chemical Technology, Hyderabad	DR PRAVEEN R LIKHAR DR RAJENDER REDDY (<i>Alternate</i>)
Ministry of Defence (DGQA), Kanpur	SHRI R. N. APARAJIT
Ministry of Chemicals & Fertilizers, New Delhi	DR ROHIT MISRA DR O. P. SHARMA (<i>Alternate</i>)
National Chemical Laboratory, Pune	DR DARBHA SRINIVAS DR PARESH DHEPE (<i>Alternate</i>)
National Metallurgical Laboratory, Jamshedpur	DR TRILOCHAN MISHRA SHRI DEVBRATA MISHRA (<i>Alternate</i>)
National Mineral Development Corporation Ltd, Hyderabad	SHRI RAJAN KUMAR DR PRASHANT SHARMA (<i>Alternate</i>)
National Peroxide Ltd	DR JOY ANTHONY
National Physical Laboratory, New Delhi	DR NAHAR SINGH DR S. P. SINGH (<i>Alternate</i>)
National Test House (NTH), Ghaziabad	MS RICHA KUNDRA
Office of the Development Commissioner (MSME), New Delhi	DR KARTHIKEYAN MS ANNA BACKIAM (<i>Alternate</i>)
Shriram Institute for industrial research, Delhi	DR (MS) LAXMIRAWAT SHRI B. GOVINDAN (<i>Alternate</i>)
Tamilnadu Petroproducts Limited, Chennai	SHRI RAVI MUTHUKRISHNAN
Tata Chemicals Ltd, Gujarat	SHRI NAJMUL HASAN KHAN
The Dharamsi Morarji Chemicals Co. Ltd, Mumbai	SHRI MANDAR GAIKWAD
Vaibhav Analytical Services, Ahmedabad	SHRI GAURANG OZA SHRI ASHUTOSH KAUSHIK

<i>Organization</i>	<i>Representative(s)</i>
In Personal Capacity	SHRI D. K. JAIN
Directorate General, BIS	SHRI A. K. LAL, Scientist E And Head (Chd) [Representing Director General (<i>Ex-Officio</i>)]

Member Secretary
SHRI SAGAR SINGH
Scientist 'C' (CHD), BIS

Bureau of Indian Standards

BIS is a statutory institution established under the *Bureau of Indian Standards Act, 2016* to promote harmonious development of the activities of standardization, marking and quality certification of goods and attending to connected matters in the country.

Copyright

BIS has the copyright of all its publications. No part of these publications may be reproduced in any form without the prior permission in writing of BIS. This does not preclude the free use, in the course of implementing the standard, of necessary details, such as symbols and sizes, type or grade designations. Enquiries relating to copyright be addressed to the Head (Publication & Sales), BIS.

Review of Indian Standards

Amendments are issued to standards as the need arises on the basis of comments. Standards are also reviewed periodically; a standard along with amendments is reaffirmed when such review indicates that no changes are needed; if the review indicates that changes are needed, it is taken up for revision. Users of Indian Standards should ascertain that they are in possession of the latest amendments or edition by referring to the website- www.bis.gov.in or www.standardsbis.in.

This Indian Standard has been developed from Doc No.: CHD 01 (18256).

Amendments Issued Since Publication

Amend No.	Date of Issue	Text Affected

BUREAU OF INDIAN STANDARDS

Headquarters:

Manak Bhavan, 9 Bahadur Shah Zafar Marg, New Delhi 110002

Telephones: 2323 0131, 2323 3375, 2323 9402

Website: www.bis.gov.in

Regional Offices:

	Telephones
Central : 601/A, Konnectus Tower -1, 6 th Floor, DMRC Building, Bhavbhuti Marg, New Delhi 110002	{ 2323 7617
Eastern : 8 th Floor, Plot No 7/7 & 7/8, CP Block, Sector V, Salt Lake, Kolkata, West Bengal 700091	{ 2367 0012 2320 9474
Northern : Plot No. 4-A, Sector 27-B, Madhya Marg, Chandigarh 160019	{ 265 9930
Southern : C.I.T. Campus, IV Cross Road, Taramani, Chennai 600113	{ 2254 1442 2254 1216
Western : Plot No. E-9, Road No.-8, MIDC, Andheri (East), Mumbai 400093	{ 2821 8093

Branches : AHMEDABAD. BENGALURU. BHOPAL. BHUBANESHWAR. CHANDIGARH. CHENNAI. COIMBATORE. DEHRADUN. DELHI. FARIDABAD. GHAZIABAD. GUWAHATI. HIMACHAL PRADESH. HUBLI. HYDERABAD. JAIPUR. JAMMU & KASHMIR. JAMSHEDPUR. KOCHI. KOLKATA. LUCKNOW. MADURAI. MUMBAI. NAGPUR. NOIDA. PANIPAT. PATNA. PUNE. RAIPUR. RAJKOT. SURAT. VISAKHAPATNAM.